ORCHARD PENDANT/CTC

SKU# 039100, 039101, 039102, 039103

Rated Voltage 220-240V~ 50Hz

Thank you for purchasing this quality Lucci product. To ensure correct function and safety, please read and follow all instructions carefully before assembly, installation and use of this product. Please keep instructions for future reference.

Warranty

- This fitting is covered by a 12 month warranty. The warranty is from date of purchase, not the date of installation.
- If the fitting is not assembled and installed by a licensed electrician the warranty will be void.
- Please retain proof of purchase and evidence of assembly and installation by a licensed electrician.
- Warranty will be void if there is any damage due to improper usage or modification to the fitting.
- Failure to comply with the instructions in this manual may increase the risk of damage or injury and will void warranty.

Installation Requirements

- This fitting must be assembled and installed by a licensed electrician.
- All wiring and installation of the fitting must adhere to local and national wiring rules.
  eg. AS/NZS 3000:2007/Amendment 2:2012 Electrical installations.
- Do not exceed the maximum wattage rating.
- Select a suitable location for installation:
  - This fitting is suitable for indoor use only.
  - The mounting point must support 2 times the weight of the fitting.
  - Ensure the fitting is not installed in direct line of an air vent/system.
  - When installing a fitting in an area prone to moisture, ensure that the area is well ventilated and an appropriately rated exhaust fan is used if required. Damage or corrosion caused by moisture is not a product fault, and as such is not covered under warranty.
- Take care not to pull any electrical wires during unpacking as this may damage the connection.
- Lay out all the components on a smooth surface and make sure there are no components missing before assembling. If parts are missing, return the complete product to the place of purchase for inspection or replacement.
- Check whether the fitting has been damaged during transport. Do not operate/install any product which appears damaged in any way. Return the complete product to the place of purchase for inspection, repair or replacement.
- Ensure power to the circuit you are working on has been switched OFF before commencing any electrical work.

Installation Directions

- Select the type of installation you require before assembly and installation:
  This light fitting can be installed as a Pendant or Close to Ceiling.
  Refer to the corresponding instructions and diagram for the different installation methods.
  NOTE: Assembly and installation of this fitting must be done by a licensed electrician.
- Due to the size of the fitting, two people may be required to lift up the fitting during installation.
- Remove all packaging material from the product and be careful not to throw away accessories that may be hidden within the packaging material. To help with assembly, lay the fitting on its side on a smooth non scratch surface.
- Spread the arms (T) of the fitting out evenly so they are spaced out.
- Tighten the nut (S) onto top of each arm so there is full earth continuity and the arms are locked in position.

PENDANT INSTALLATION (Refer to the diagram below for components)

1. Remove the mounting bracket (B) from the canopy (F) by loosening the screws (M) on both sides.

2. Use the mounting bracket (B) as a template to mark the screw positions on the ceiling.

3. Install the mounting bracket (B) onto the ceiling by using appropriately sized mounting screws (K) and anchors (A).
   Ensure the screws (K) and anchors (A) used are suitable for the mounting surface and the surrounding environment.

4. Determine the suspension length required for your installation location.
   The chain (O) suspension length can be adjusted by using the chain link connectors (G).
   After adjusting the chain (O) suspension length, check and ensure that NO load/weight is placed onto the cord (P).
   The full load/weight of the pendant must always be on the chain (O) suspension.

5. Remove the cover from the terminal block (C) and connect the mains supply wire.

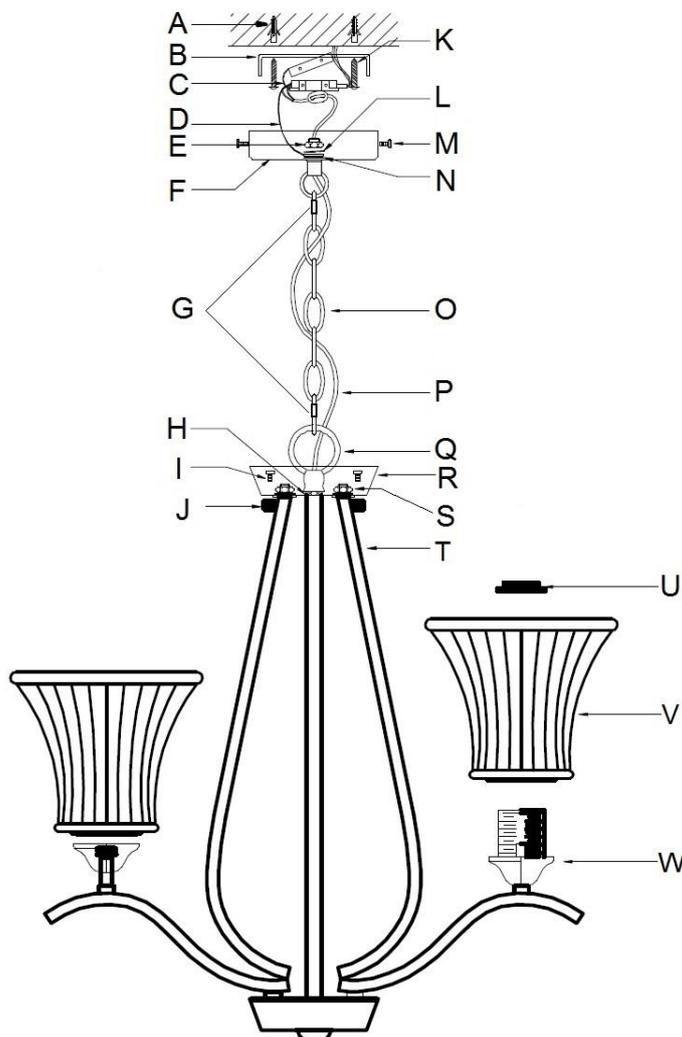| Mains Supply Wire	Fitting Wire
Earth – Yellow/Green	Yellow/Green or ⏚
Neutral – Blue or Black	Blue or N
Live – Brown or Red	Brown or L

6. Ensure the wires are secure and no bare wires are exposed. Install the cover back over the terminal block (C).

7. Install the canopy (F) onto the mounting bracket (B) and secure by tightening the screws (M) on both sides

8. Check to ensure the chain (O) is not damaging the cord (P).

9. Install the decorative nuts (J) with the threaded screws (I).

10. Install the glass shades (V) onto the lamp holders (W) by securing with the lamp holder ring (U).

11. Install globes (not included) into the lamp holders. Do not exceed the maximum wattage rating.

12. After the installation, switch on the fitting to test and enjoy your new lighting product.

CLOSE TO CEILING INSTALLATION

For close to ceiling installation, some of the components need to be removed from the fitting and re-assembled again.

REFER TO PREVIOUS DIAGRAM FOR COMPONENTS

1. Remove the cord (P) from the terminal block (C) and fully unravel from the chain (O).
2. Remove the chain ring (Q) from the top of the fitting (R).
3. Remove the nut (E), washer (L), earth wire (D) and star washer (N) from the canopy. Keep these components aside, they will be required to re-assemble later.

REFER TO DIAGRAM BELOW FOR COMPONENTS

4. Assemble the mounting bracket (Y) by installing the nut (X) and the threaded screws (Z).
5. Use the mounting bracket (Y) as a template to mark the screw positions on the ceiling.
6. Install the mounting bracket (Y) onto the ceiling by using appropriately sized mounting screws (K) and anchors (A). Ensure the screws (K) and anchors (A) used are suitable for the mounting surface and surrounding environment.
7. Install the star washer (N), earth wire (D), washer (L) and nut (E) to the top of the fitting (R).
8. Remove the cover from the terminal block (C) and connect the mains supply wire.
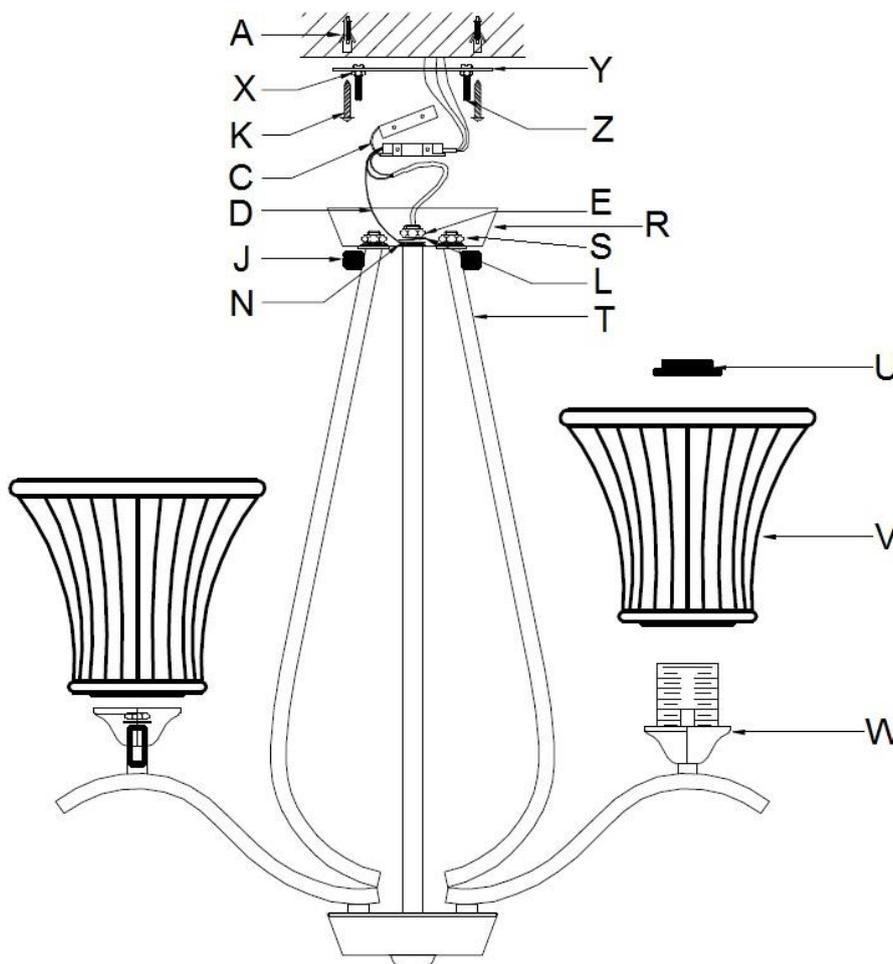
Mains Supply Wire	Fitting Wire
Earth – Yellow/Green	Yellow/Green or ⏚
Neutral – Blue or Black	Blue or N
Live – Brown or Red	Brown or L

9. Ensure the wires are secure and no bare wires are exposed. Install the cover back over the terminal block (C).
10. Install the fitting onto the mounting bracket (Y) and secure by tightening the decorative nuts (J).
11. Install the glass shades (V) onto the lamp holders (W) by securing with the lamp holder ring (U).
12. Install globes (not included) into the lamp holders. Do not exceed the maximum wattage rating.
13. After the installation, switch on the fitting to test and enjoy your new lighting product.

Safety Tips

- Always ensure the power is OFF and the fitting has cooled down before performing any maintenance, cleaning, changing the globe or making any adjustment to the fitting.
- To avoid injury or damage to the fitting, ensure that power leads and screws are secure before connecting the power.
- Select a suitable location away from liquids and hazards.
- Ensure that the fitting does not come in contact with corrosive chemicals, etc.
- To clean, wipe with a damp clean cloth. Never soak the fitting with water.

Specifications

SKU #	039100	039101	039102	039103
Colours	Antique Black	Antique Nickel	Antique Black	Antique Nickel
Rated Voltage	220-240V~ 50Hz			
Rated Wattage	135W Max. (3 x Max. 45W)		225W Max. (5 x Max. 45W)	
Lamp Holder	ES / E27			
Weight	4.4kg		6.5kg	
Dimensions	H:530mm Dia:520mm Susp:2000mm MAX		H:540mm Dia:580mm Susp:2000mm MAX	